




## Laminator User Guide

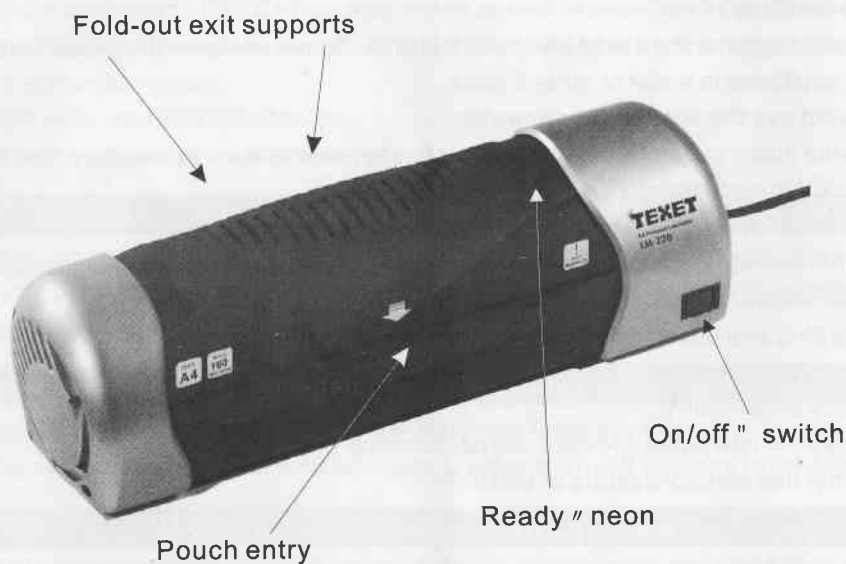

**LM-270 A4 Personal Laminator**

# LM-270 A4 Home Laminator

Thank you for choosing a Texet laminator. We aim to supply quality machines that create excellent results. Before operating the laminator please read and keep the user instructions for reference.

**When using electrical appliances, basic precautions should always be followed to reduce risk of injury or electric shock, including the following.**

1. Always unplug the appliance when not in use
2. Extreme caution to be used when operating the appliance near children or invalids
3. The laminator will become very hot in use and care should be taken when handling the machine.
4. Protect against the risk of electrical hazards. Do not immerse the power cord, plug or appliance in water or other liquids.
5. Do not use the appliance near water.
6. Do not insert any metal objects or other foreign objects such as jewellery, hair, fingers or clothing into the appliance.
7. Remove paper clips and staples before laminating.
8. Do not operate the appliance with a damaged plug or power cord or after the appliance has malfunctioned or become damaged in some manner.
9. The plug and power cord is the disconnect device.
10. The appliance should be installed near the outlet socket and the socket should be easily accessible.
11. Only laminate paper or board. Do not laminate unusual objects.
12. Do not use aerosol dusters or cleaners.
13. Do not spray anything into or lubricate the appliance.

## Setup

1. Operate the machine on a flat and stable surface.
2. Ensure there is enough clear space at the rear of the machine for the lamination to exit the machine.
3. The LM-270 operates with laminating pouches 100(2\*50)micron -160(2\*80) micron thick (Credit Card to A4 sizes)

## Operating the hot laminator

The LM-270 is operated by an on/off rocker switch located at the front of the appliance. There are 2 positions ON(1), OFF(0).

1. Plug the machine into a suitable power supply outlet.
2. Open the two exit supports at the rear of the machine. They are hinged as part of the machine body.

3. Selecting ON(1) will start the heating process. The ON/OFF switch will light up red . The machine will start to heat up. After 3-4 minutes, the green READY light will illuminate when the machine has reached the correct operating temperature. The machine is ready to laminate.
4. Prepare the laminating pouch for inserting into the machine . Load the paper centrally into the pouch alongside the pre-sealed edge. Do not use pouches thicker than 160mcn(2\*80mcn per side)
5. When the machine has reached operating temperature. You may insert the pouch (sealed edge first) squarely into the machine until it engages with the rollers. Never insert a pouch open edge first into the machine.
6. The pouch will move through the machine and exit at the rear .
7. During the process the READY light may go out as heat is absorbed by the laminating pouch. This is normal. Please wait until the READY light is green again before inserting the next pouch.
8. Turn the laminator OFF(0) after use.
9. Remove the plug from the power supply.

### **IMPORTANT!**

Do not touch the top of the machine during use. The top of the machine gets very hot during use And takes approx. 3-4 hours to cool down after use .Do not place items on top of the machine at any time

### **.Laminating capacity**

The LM-270 is a personal laminator designed for hot lamination only and low volume use .Do not use the machine with pouches greater than 160 microns in thickness.

### **.How to load a laminating pouch**

The laminating pouch is sealed along one side. Open the pouch and place the paper to be laminated centrally inside the pouch as close to the sealed edge as possible. Ensure there is an equal border all round the paper (eg: A4 paper should have 3mm border). The sealed edge (not the open edges) is placed into the entry slot to start the lamination process.

### **In case of a jam**

In the unlikely event that the machine becomes blocked switch off the machine and return to a qualified service engineer. Do not open the machine.

### **Warranty & service**

Never service the product yourself. The appliance is guaranteed for 12 months from date of purchase. Subject to normal use. If the laminator is under warranty then return it to the point of purchase for replacement or repair.

## Disposal



Please dispose of this product responsibly at approved waste or recycling facilities. Do not dispose of this product in household waste.

## Specifications

Rollers-----	2Roller(hot shoe)
Entry width-----	230mm
Min lamination thickness-----	100(2*50) micron
Max lamination thickness-----	160(2*80)micron
Min pouch size-----	Credit card size (54*86mm)
Max pouch size-----	A4 size (216*303mm)
Max lamination depth-----	0.8mm
Lamination speed-----	25cm/min
Warm-up period -----	3-4 minutes
Power consumption-----	372W
Input-----	240 volt AC. 1.55amp
Dimensions -----	345*125*95 mms(l*d*h)

Type designation: LM-270

Testing acc. To EN60950:2000

Low Voltage Directive 73/23/EEC

EMC Directice 89/336/EEC

Test Standards: EN 55014-1/A2:2002

EN 55014-2/A2:2001

EN 61000-3-2:2000

EN 61000-3-3/A1:2001